



WWW.MOBILESTORAGESYSTEMS.NET

LUND COURT FARM, NAWTON, YORK, NORTH YORKSHIRE, YO62 7TZ
INFO@MOBILESTORAGESYSTEMS.NET | 01751 430 318


FITTING INSTRUCTIONS FOR VEHICLE SAFE



PIC.1 If carpet fitted to seat box, mark a vertical line from the top corner of seat box to the floor – cut carpet along this line and peel back to allow access to metal panel, pull out plastic plugs as necessary.

If plastic seat belt retainer is fitted, knock pin out of rivets from back.

PIC.2 Carefully put face of safe against panel and push down to floor, locate front top corner against flange. Mark through fixing holes. Ensure drilling will not cause problems behind panel, then drill 6 fixing holes 5.5mm and 2 holes on bottom to suit self-tapping screws.

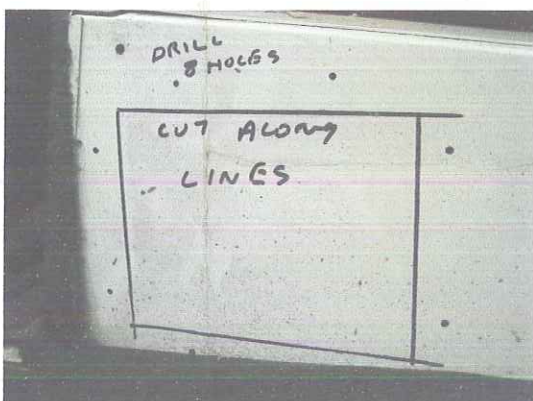

PIC. 3 Measure in 15mm from holes and draw a square to suit body of safe. Panel is aluminium and can be cut by any common means (angle grinder, jig saw with course blade, tin snips etc). Check fit of safe, clean any sharp rough edges, place into position.

Loosely fit 6 screws with reinforcing panels behind and nyloc nuts, 2 self-tapping screws through bottom flange, then fully tighten.

Using double sided tape, or contact adhesive, re-fix front section of carpet to seat box , the back section should tuck under seat runner, if desired use a plastic plug to fix to top of seat box.

PLEASE NOTE THE PYGMY SAFE CAN BE MOUNTED TO ANY FLAT SURFACE OF YOUR VEHICLE, HOWEVER THEY MAY NOT BE WATERPROOF.