



# MOBILE STORAGE SYSTEMS

STRENGTH BY DESIGN SINCE 1999

## WHAT YOUR KIT INCLUDES:

6 X M8 X 16 SET SCREWS  
4 X M8 WASHERS  
6 X M8 INTERNAL SHAKEPROOF WASHERS  
2 X M8 35 SET SCREWS  
2 X M8 NYLOCS

4 X BLACK PLUGS  
1 X LHS BRACKET  
1 X RHS BRACKET  
1 X SEAT BOX BRACKET  
1 X UNDERFLOOR MOUNTING BRACKET  
3 X INSULATION PADS

INSTALLATION TIME APPROXIMATELY 30 - 45 MINS

## CUBBY BOX FITTING INSTRUCTIONS

SUITABLE FOR ALL LAND ROVER DEFENDERS



PLEASE READ THROUGH FULLY BEFORE ATTEMPTING INSTALLATION.  
ANY QUESTIONS, PLEASE CONTACT US.

*Please note: The pictures shown in these instructions relate to a vehicle with a land rover cubby box previously installed.*

1. Remove existing cubby box/tray by lifting out the cup holder. Undo and take out the 2 screws. Inside the cubby are 2 plastic grommets, remove these and undo the 2 screws. The cubby box/tray can now be lifted out of the way. Place the screws back into the 2 front holes – these are not used.

Only if you are replacing a store caddy and not the tray  
Remove the 4 self-tapping screws located under the rubber matting. (These will be used later)

Before fitting the underfloor mounting bracket underneath the seat box holding the fuel lines needs to be rotated by 180 degrees. Unclip the lines, slacken the securing bolt and rotate as shown below.

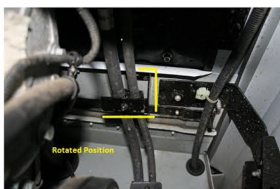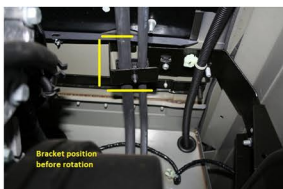

2. If removing the tray only remove the 2 middle self-tapping screws.
3. Fix hole A on the seat box mounting bracket to hole B on the LH and RH brackets. Using the M8 x 16 set screws washers and nylocs provided.
4. Slide all 3 mounting brackets into position and using the screw already in place affix the rear seat mounting bracket. (hole C)
5. Replace the self tapping screws that were previously removed into holes D. They go back in the holes they came out.
6. Please note for installation where a cubby was mounted the inner holes on the bar need to be used. If a tray was previously mounted the outer holes need to be used.
7. Drop setscrews through the 2 remaining holes in the side bracket. Take the under floor mounting bracket and fix to the underside of the car seatbox where the screws are located. Using the M8 x 35 set screws provided. (Fold facing upwards)

**\*\*TOP TIP\*\*** If fitting by yourself use a small piece of polystyrene in-between the fuel lines and the retaining bar to hold the bar into position. This must be removed once the bar is secured into position.

8. Leave all screws finger tight to allow a little bit of movement.
9. Test fit the cubby box. Using hole H to Nutsert F – Align is necessary.





# MOBILE STORAGE SYSTEMS

STRENGTH BY DESIGN SINCE 1999

## WHAT YOUR KIT INCLUDES:

6 X M8 X 16 SET SCREWS  
4 X M8 WASHERS  
6 X M8 INTERNAL SHAKEPROOF WASHERS  
2 X M8 35 SET SCREWS  
2 X M8 NYLOCS

4 X BLACK PLUGS  
1 X LHS BRACKET  
1 X RHS BRACKET  
1 X SEAT BOX BRACKET  
1 X UNDERFLOOR MOUNTING BRACKET  
3 X INSULATION PADS

INSTALLATION TIME APPROXIMATELY 30 - 45 MINS

## CUBBY BOX FITTING INSTRUCTIONS

SUITABLE FOR ALL LAND ROVER DEFENDERS

*PLEASE READ THROUGH FULLY BEFORE ATTEMPTING INSTALLATION.  
ANY QUESTIONS, PLEASE CONTACT US.*

*Please note: The pictures shown in these instructions relate to a vehicle with a land rover cubby box previously installed.*

10. Tighten all the screws on the mounting brackets, insert the insulation pads between the brackets and then fix the cubby box on top using the M8 x 16 set screws and shakeproof washers.
11. If your Store Caddy is fitted with a front cup holder and trinket tray you may prefer to use the higher position - pull out the 3 plastic plugs - take out cup holder then trinket tray and replace in alternative position. Press plastic plugs back in.
12. Use the same plastic plugs provided to locate the rear cup holder into position if supplied. (These can also be purchased at a later date)
13. You can of course use the trinket tray without the cup holder.
14. The plugged holes in the back of Store Caddy are 30mm dia. to accept 12 volt sockets to run ancillary equipment. When wiring the sockets ensure correct polarity.
15. The radio compartment can be mounted in one of three positions. This is to allow possible use of space beside the radio for switches etc.
  - a. Centre
  - b. Across to left hand side
  - c. Across to right hand side.
16. The map pocket can be fitted to either side (or a second one fitted).

